



step3

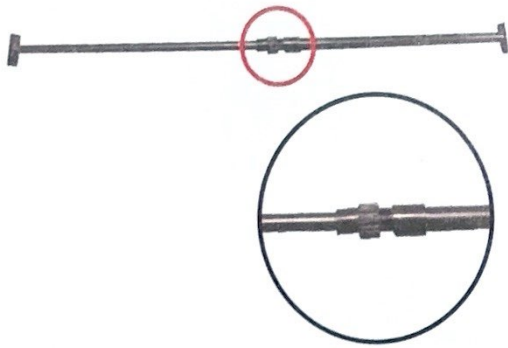


step5

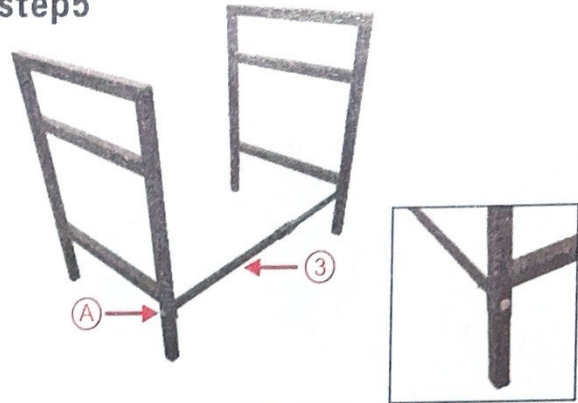

step4



step6

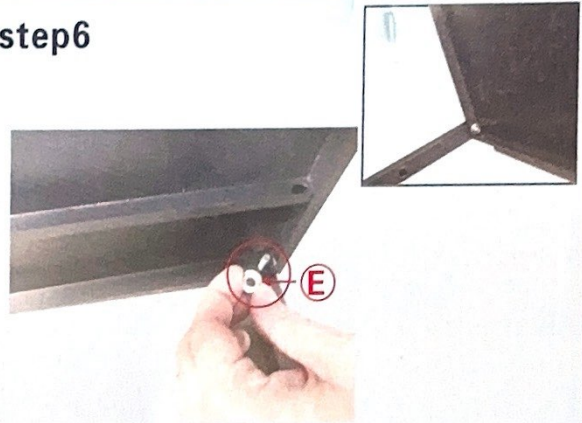









step7



Complete installation


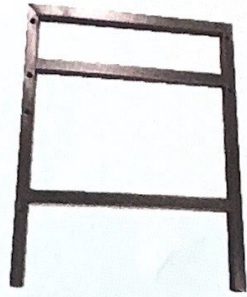






Installation diagram of M-frame microwave oven rack on the first floor

					
screw	couple	foundation	wrench	Nuts	Telescopic rod adjustment accessories
A*  6	B*6	C*4	D*1	E*4	F*  1

Kind reminder: Tighten the screws seven times during installation, and wait until all are completed before tightening!

Name and serial number

			
Large board	shelf	M-frame telescopic rod	Small plate
① X1	② X2	③ X1	④ X1
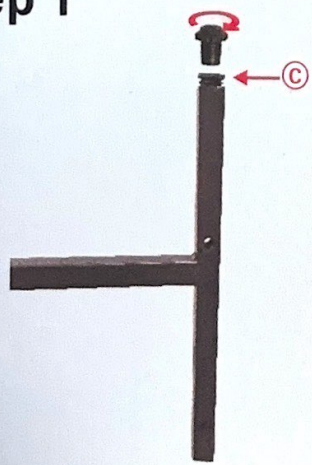
<p>step 1</p> 	<p>step2</p> 
--	---